



**CONTROL BOX ASSEMBLY
IPBTF01-16 (A) (SH. 1 of 3)**

KEY NO.	PART NO.	DESCRIPTION	QTY.
1	1E01	CONTROL BOX BASE	1
2	1E03	FRONT PANEL	1
3	P0244	DIODE	3
4	1E02	CONTROL BOX COVER	1
5	P0807	TERMINAL, 12	1
6	P0218	DIODE, ZENER	1
7	P0804	RESISTOR, 100 OHMS	1
8	P0820	REGULATOR, VOLTAGE	1
9	P0805	TIMER	2
10		4-40 X 1/2" PHS	2
11		6-32 X 3/8" SHCS	4
12	P0803	POWER SUPPLY	1
13	P0223	SOCKET	1
14	P0224	SOCKET	1
15	P0810	POT, ADJ	1
16	P0226	SOCKET, 250VAC	1
17	P0227	HOLDER, FUSE	1
18	P0228	SOCKET	1
19	P0229	BUMPER, RUBBER	4
20	P0230	COUNTER	1
21	P0231	KNOB 1/4	2
22	1E11	GAUGE, 1003,	1
23	P0233/220	SWITCH, PB	1
24	P0234	KNOB 1/4 BLK.	1

**CONTROL BOX ASSEMBLY
IPBTF01-16 (A) (SH. 2 of 3)**

KEY NO.	PART NO.	DESCRIPTION	QTY.
25	P0005	FITTING	1
26	P0079	SWITCH, PB	1
27	P0806	SWITCH, ROTORY	1
28	P0237	SWITCH, TOG	2
29	P0238	SWITCH, TOG	1
30	P0239	SWITCH, PB	1
31	P0809	POT, ADJ.	1
32	P0080	BEZEL	1
33	P0082	BUTTON, YELLOW	1
34	P0241	O-RING	1
35	P0242	RETAINING RING	1
36		6-32 X 3/8" PHS	4
37		6-32 X 3/8" PHS	4
38		8-32 X 1/2" PHS W/WASHER	2
39		6-32 X 3/8" SHCS	8
40	P0811	RESISTER 3.3M	1
41		OMITTED	
42		6-32 X 1" SHCS	1
43	P0801	SOCKET, RELAY	1
44	P0327	BULKHEAD FITTING	1
45	P0667	FUSE BUSS (3A)	1
46	P0817	BASE, I/O	1
47		OMITTED	
48		OMITTED	

**CONTROL BOX ASSEMBLY
IPBTF01-16 (A) (SH. 3 of 3)**

KEY NO.	PART NO.	DESCRIPTION	QTY.
49	P0802	RELAY	1
50	P0354	CONNECTOR, EDGE	1
51	P0821	VARISTOR	1
52	P0816	CPU, PLC	1
53	P0573	DECAL (J2 VALVE DRIVE)	1
54	P0574	DECAL (J3 CONTROL)	1
55	P0575	DECAL (AIR GAUGE)	1
56	P0576	DECAL (VACUUM)	1
57	P0580	DECAL (3A)	1
58	P0416	DECAL (115 VOLTS)	1
59	P0815	*(BATTERY (CR2354) *DISPOSE BATTERY ACCORDING TO LOCAL REGULATIONS*	1
60		OMITTED	
62		OMITTED	
63	P0622	TERMINAL, F-M	3
64	P0813	INPUT, PLC	1
65	P0713	CORD, POWER	1
66	P0448	SWITCH, FOOT	1
67		OMITTED	
68	P0327	AIR FITTING	1
69		8-32 X 5/8" SHCS	2
70		3-56 X 5/16" PHS	4
71		4-40 X 1/2" PHS	4